

©T30LI™



Arrow[®] GT30LI™ Cordless Glue Gun

PMGT30LI-8 Rev 07/18



GT30LI™ CORDLESS GLUE GUN

ENGLISH

GENERAL TOOL SAFETY WARNINGS
DEFINITION OF SYMBOLS USED ON TOOL & FUNCTIONAL DESCRIPTION
OPERATION INSTRUCTIONS
TOOL MAINTENANCE AND ACCESSORIES
WARRANITY



3-4

5 6–8

10

To avoid injury and misuse, please read the instruction manual before operation.

Pour éviter tout risque de blessures et une mauvaise utilisation, prière de lire le manuel d'utilisation avant l'utilisation.

A fin de evitar lesiones y mal uso, lea el manual de instrucciones antes de usar la herramienta.



Obey all safety messages that follow this symbol to avoid possible injury or death.

Respecter tous les messages de sécurité suivant ce symbole pour éviter tout risque de blessures ou de décès.

Observe todos los mensajes de seguridad que aparecen junto a este símbolo para evitar posibles lesiones da muerte.



Always wear safety glasses when operating the tool.

Toujours porter des lunettes de sécurité en utilisant l'outil.

Siempre use anteojos de seguridad cuando utilice esta herramienta.



Herramienta clase II



GENERAL TOOL SAFETY WARNINGS



WARNING When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

CAUTION: Read Safety Rules and Operating Instructions Carefully.

READ ALL SAFETY INSTRUCTIONS:

- Do not touch heated nozzle area of glue gun or melted glue. Touching any heated portions of the product may result in personal injury, such as a burn.
- Keep work area clean and keep electrical contacts clear of debris. Work environment should be clean, dry, well lit and clear of flammable materials. Cluttered, dark areas and flammable materials may result in a risk of fire, electric shock or personal injury.
- Keep children and bystanders away while operating the tool. Distractions can cause you to lose control.
- Always use safety glasses. Following this rule will reduce the risk of eye injury.
- 5. Do not harm the cord. Never use the cord for carrying, pulling or unplugging the glue gun tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- Glue gun tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) glue gun tools. Modifying plug and failure to use proper outlet increases risk of electric shock.



- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- 8. Disconnect tools when not in use.
- 9. Do not touch the glue stick or trigger except to dispense glue. If you insert the glue stick into the glue gun using too much force can cause hot glue to unexpectedly discharge from the nozzle. Following this rule may reduce the risk of accidental glue discharge.
- Do not expose this tool to rain or wet conditions.
 Water entering a corded electric tool will increase the risk
 of electric shock.
- 11. When not in use, the tool should be stored indoors.
- 12. Store idle glue gun out of the reach of children, and do not allow persons unfamiliar with the tool or these instructions to operate the glue gun. Electric tools are dangerous in the hands of untrained users.
- 13. Do not pull glue sticks from gun. The feed mechanism may become damaged or impaired. If you desire to change types of glue, cut off protruding end of glue stick and feed the remainder through with the new type of glue stick.



GENERAL TOOL SAFETY WARNINGS

SAFETY PRECAUTIONS: WARNING!

Do not touch heated nozzle or melted glue – touching any heated portions of the product may result in personal injury, such as a burn. Operating temperature of the nozzle is 380°F (193°C).

- When glue is hot do not lay glue gun on its side always use stand.
- Property damage and personal injury may result from extended contact with tip of hot glue gun.
- Place the glue gun in the upright position when idle using the base stand provided.
- Do not leave unattended.
- For general indoor household use only and should not be used for outdoor or industrial purposes.
- Do not use near water, liquids or rain.
- Do not use this product in areas where the risk of explosion is present.
- USE ONLY RECOMMENDED ATTACHMENTS. Use of an attachment not recommended or sold by the manufacturer may result in a risk of fire, electric shock or personal injury.
- UNPLUG POWER CORD when not in use.
- Turn off glue gun by placing the switch to the OFF position and unplug charging stand when not in use.
- Allow glue gun to cool before storing.
- Do not try to remove unused portion of glue sticks from glue gun after use.
- Do not use a damaged glue gun.
- Do not disassemble or attempt to repair this appliance -

- service must be performed only by an authorized service representative.
- Children shall not play with appliance. However, this
 appliance can be used by children aged 8 and above, as
 well as by person with reduced physical, sensory or mental
 capabilities, provided that they are supervised and are
 instructed about using the appliance in a safe way and
 understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep away from children under the age of 8 and animals.
- Do not carry the tool by the cord or pull cord to disconnect it from the outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid hazard.
- Recharge the power tool only with the charger specified by the manufacturer. A charger that is suitable for one type of power tool may create a risk of fire when used with another power tool.
- Under abusive conditions and extreme temperature, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not store tool in locations where the temperature may reach or exceed 104°F (40°C). Extended periods of extreme heat may cause damage to the battery and possible fire.
- Do not dispose of the tool by incineration. The batteries may explode in fire.



DEFINITION OF SYMBOLS USED ON TOOL & FUNCTIONAL DESCRIPTION

FUNCTIONAL DESCRIPTION

V	Volts
A	Amperes
Hz	
	Alternating Current


Obey all safety messages that follow this symbol to avoid possible injury or death.



Always wear safety glasses when operating the tool.



Class II Tool

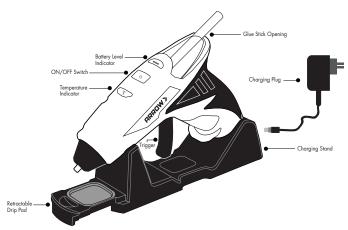

IMPORTANT When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

BEFORE INITIAL OPERATION

The battery is supplied partially charged. Before first use, charge the battery for at least 3 hours. The battery can be charged at any time and interruption of the charging process will not impact the service life or damage the battery.

Never charge the battery in temperatures above 104° (40° C) or below 50° (10° C).

Charging:

Connect the plug to a 100 - 240 V 50/60Hz power source.

Place the glue gun into the charging stand. Battery level indicator will light up red.

Charging Complete:

- 1. Battery level indicator will light up green when glue gun is fully charged and ready to use.
- 2. Remove glue gun from charging stand.
- 3. Disconnect charging stand from power supply.



OPERATION

- 1. Insert glue stick into glue stick opening at rear of tool.
- 2. If desired, extend retractable drip pad at front of charging stand.
- 3. To turn the glue gun on, press and hold ON/OFF switch until temperature indicator lights up green. The temperature indicator will remain green when glue gun has reached proper working temperature.
- 4. Allow glue to melt inside heat chamber for one minute before attempting to use.
- 5. To glue, pull the trigger to regulate glue flow and apply as needed. Do not force trigger if glue does not enter gun easily. If this occurs, allow an additional thirty seconds of heat up time. Use caution to avoid hot nozzle and glue as it can cause burns.
- Release trigger to stop the flow of glue. Apply pressure to work piece for approximately sixty (60) seconds for complete bonding.
- 7. To turn the glue gun off, press and hold ON/OFF switch until temperature indicator goes off. Place used glue gun down carefully and allow to cool before storage.

NOTE: Glue gun is equipped with an automatic safety shut-off feature that switches off after 10 minutes. To reactivate, simply turn gun back on.



DISPOSAL

Improper disposal of obsolete lithium ion batteries is unsafe and can cause environmental damage. Please dispose of this product via an approved waste removal company or your municipal waste disposal authority. Contact your local municipality for regulations in your area.

TIPS ON USING

- The working time of hot melt glue can be extended to fifty to sixty (50 to 60) seconds by applying the adhesive in large drops (1/2" diameter) or shortened to less than ten (10) seconds by extruding the adhesive in a thin line.
- 2. Large areas are difficult to bond because the adhesive frequently will harden before you have extruded the right amount.
- 3. Preheat surfaces, (especially metals) to improve bond strength. Direct sunlight will accomplish this.
- ${\it 4. The adhesive remaining in an unheated glue gun will re-melt upon heating.}\\$
- 5. Do not use on items that will be subject to temperatures above 140°F (60°C).
- 6. Do not use hot melt glue to hold heavy loads.
- 7. Some paints and stains can weaken the adhesive. You may need to paint or stain before gluing.



TOOL MAINTENANCE & ACCESSORIES

TOOL MAINTENANCE

The GT30LI™ tool is virtually maintenance free. Keep tool clean and free of dust. Wipe clean with a dry cloth; do not use harsh chemicals to clean. The GT30LI™ tool contains no user serviceable parts. In the unlikely event that your tool should need service contact:

Arrow Fastener Company, LLC

271 Mayhill Street, Saddle Brook, N.J. 07663

Tel. 201-843-6900

FOR BEST RESULTS USE ONLY ARROW® SUPERIOR QUALITY ARROW® MINI GLUE STICKS — MG12, MG24-4 ALL PURPOSE CLEAR

For crafts, hobbies and general repairs.

For woodworking, ceramics, leather, canvas, fabrics, cardboard, plastics, metal, etc. Press surfaces together. Sets in thirty to sixty (30 to 60) seconds. Available in packages of 12-4"(100mm) sticks (MG12) and 24-4" (100mm) sticks (MG24-4).

Arrow® Mini Glue Sticks are available at retail outlets, hardware stores, lumberyards and wherever fine tools are sold

GT	30LI™	GT30LI™EU GT30LI™UK	GT30LI™AUS	
120V AC 60Hz 12W	E231647 CUL US LISTED			
	49DI	220V-240V		MADE IN CHINA 95C1



WARRANTY

2 YEAR LIMITED WARRANTY

All parts of Arrow Fastener products containing electrical or electronic components or parts (other than batteries) are warranted to the original purchaser to be free from defects in material and workmanship for two years from the date of purchase.

Arrow Fastener will repair or replace, FREE OF CHARGE, during the warranty period, any product that proves to be defective in material or workmanship under normal use. If repair is not practical, Arrow Fastener may elect to replace the product or refund the purchase price in exchange for return of the defective product. For best performance, use genuine Arrow® glue sticks.

Please contact Arrow Fastener by calling 1-800-776-2228 or by writing: Arrow Fastener Company, LLC

271 Mayhill Street Saddle Brook, NJ 07663 Attn: Product Warranty Department.

Labor charges incurred by the original purchaser to repair the product are excluded. This limited warranty does not cover damage to the product relating to normal wear and tear, misuse, abuse or neglect. No warranty is provided for the batteries.

Proof of purchase from the original purchaser must be made available to Arrow Fastener for all warranty claims. This is the exclusive warranty by Arrow Fastener Company for its products containing electrical or electronic components or parts (other than batteries).

Implied Warranties. TO THE EXTENT PERMITTED BY LAW, ANY IMPLIED WARRANTY, INCLUDING ANY WARRANTY

OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE SAME DURATION AS THE APPLICABLE EXPRESS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Limitation of Liability. Arrow Fastener SHALL NOT BE RESPONSIBLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, TORT, OR OTHERWISE. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion and limitation may not apply to you.

This limited warranty gives you specific legal rights, and you also may have other rights, which vary from state to state. In Canada, the above provisions are not intended to operate where prohibited by law and do not preclude the operation of any applicable provincial protection statute which may in certain circumstances extend the express warranty herein.

Australian customers: Our goods come with guaranties that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or a refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. To obtain the benefits of this warranty, you must send the product securely packaged with proof of purchase and postage prepaid to:

Service Department, Arrow Fastener Co., LLC,

271 Mayhill Street, Saddle Brook, New Jersey 07663

10



For the ${\rm GT30LI^{TM}}$ manual translation in French and Spanish please visit www.Arrowfastener.com

Pour le manuel de GT30LI™ traduit en Français et en espagnol veuillez visiter www.Arrowfastener.com

Para el manual de GT30LI™ traducido en francés y en español por favor visite www.Arrowfastener.com

Arrow Fastener Company, LLC 271 Mayhill Street, Saddle Brook, NJ 07663

©2018 Arrow Fastener Co. LLC Rev 07/18